



FOOD PREP

1 SELECT FOOD

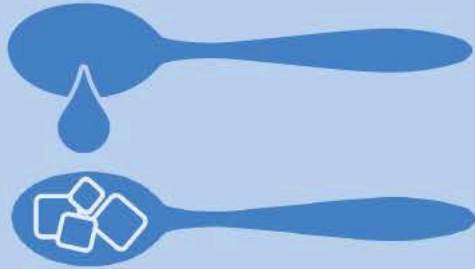


Liquids: soups, cereals, beverages
Semi Solids: oatmeals, mashed potatoes, puddings
Solids: fruits, vegetables, meats

2 PREPARE FOOD

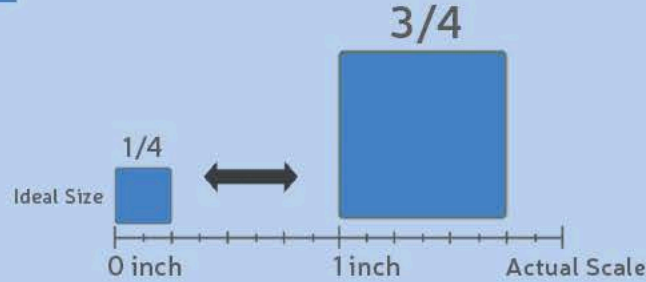

Obi works best with food prepared within the range above.


3 INSERT FOOD

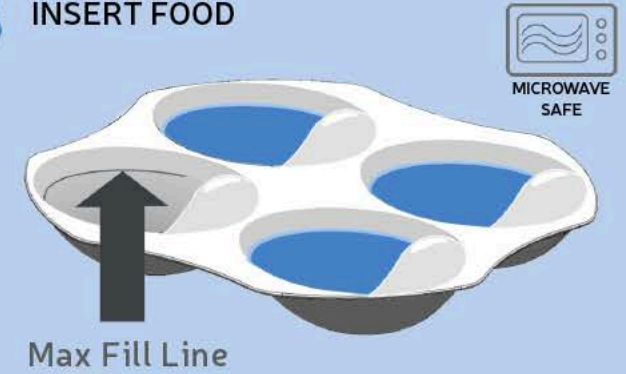

Fill bowls with food. Overfilling is not recommended.


SETUP

4 INSERT SWITCHES

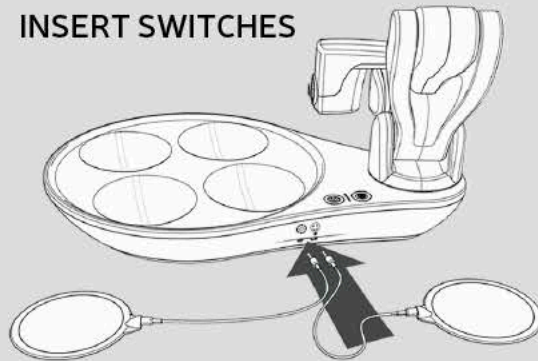


Place the device on a flat surface. Move the arm to the right, as shown. Insert the desired switches.

5 INSERT PLATE & PLACEMAT

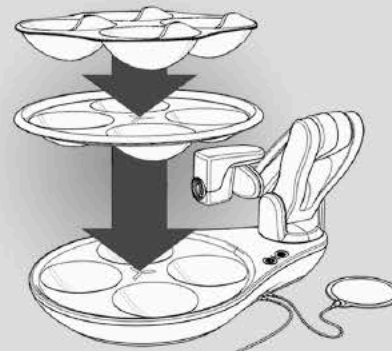

Insert the colored placemat, then place the plate on top.


6 ATTACH SPOON

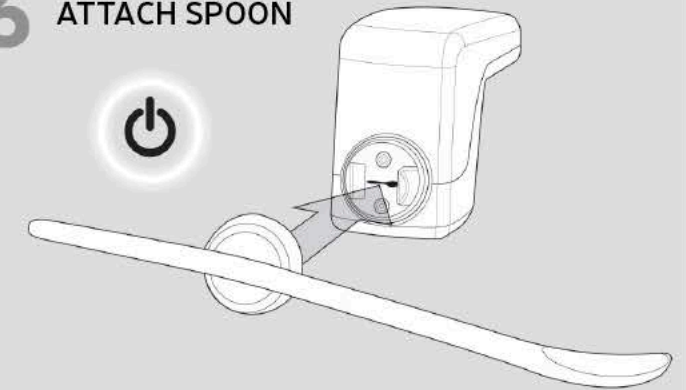

Attach the spoon and press the power button.


TEACH MODE

7 ENTER TEACH MODE

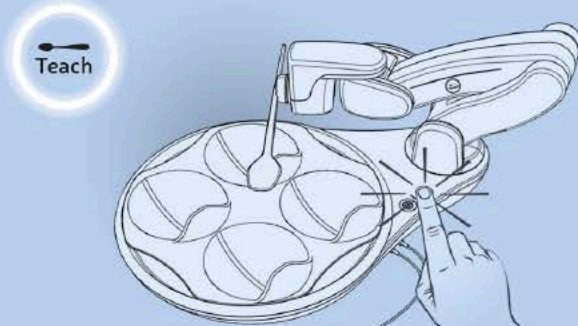

Press the teach button.


8 MOVE ARM

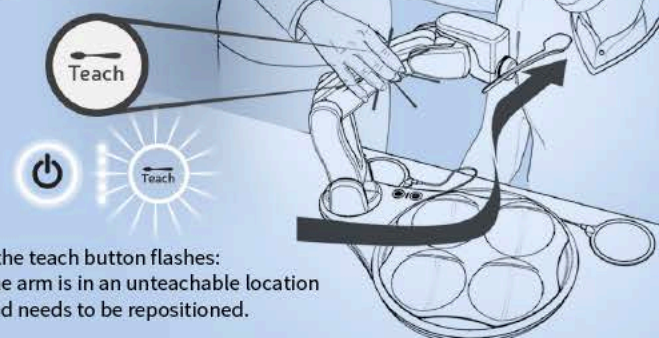

If the teach button flashes:
The arm is in an unteachable location and needs to be repositioned.


Grasp as shown with a finger covering the teach icon. Move the arm to a position in front of the user's mouth.

9 EXIT TEACH MODE

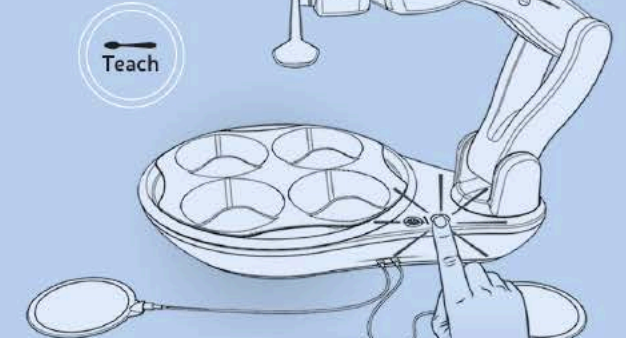


Press the teach button again to store the position and exit Teach Mode.


EATING

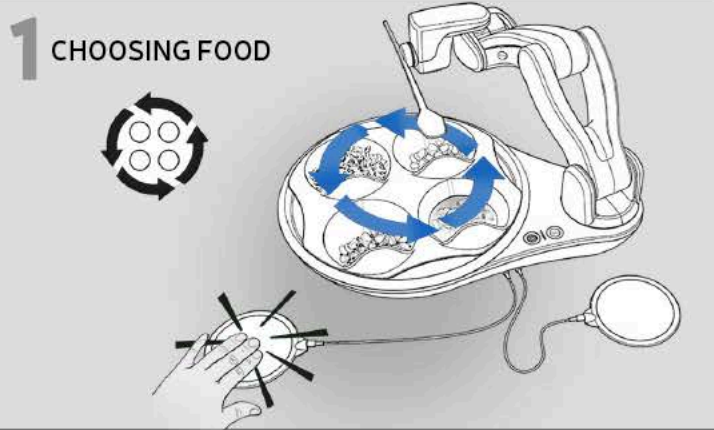

1 CHOOSING FOOD
The choose switch will move the arm one bowl each time it is activated. Use this switch to select which bowl you wish to eat from.

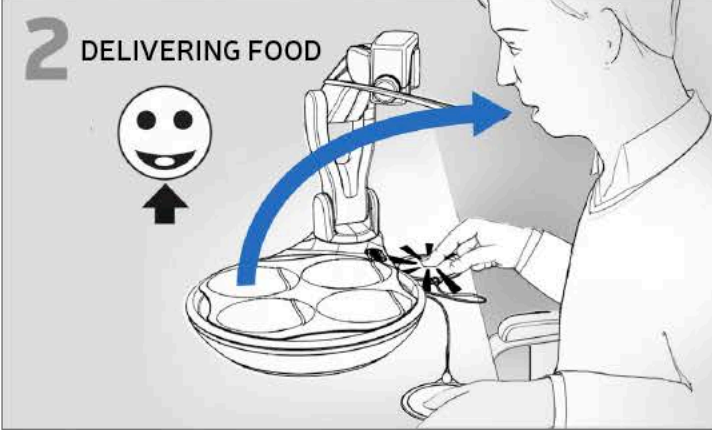


2 DELIVERING FOOD
Touch the delivery switch and the arm will scoop and deliver the spoon to the previously taught position.

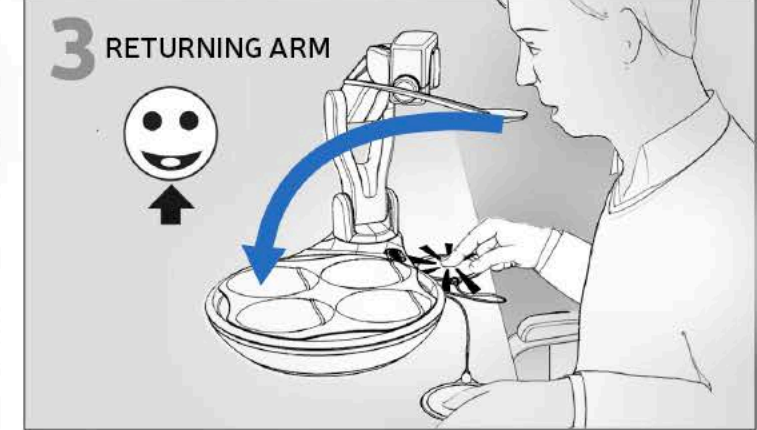


3 RETURNING ARM
Once the user removes the food from the spoon, touch the delivery switch to return the spoon to the same bowl.

CLEANING

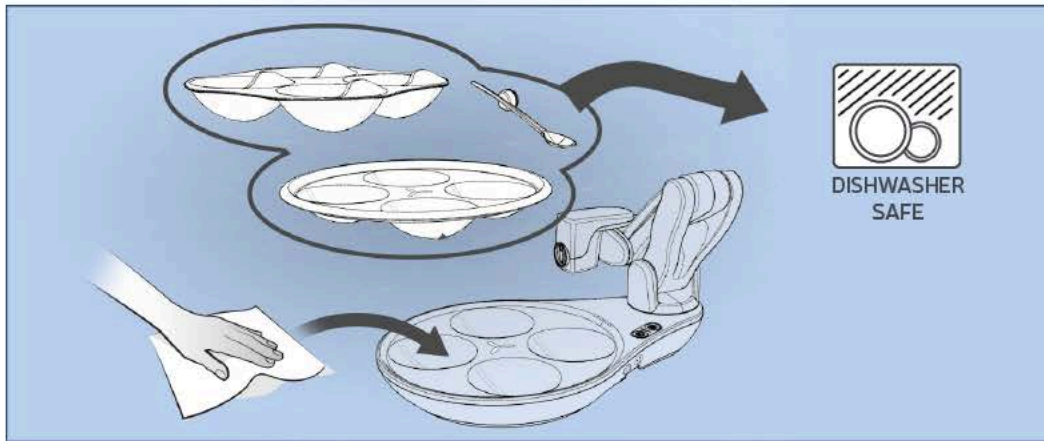


Cleaning the plate, placemat, and spoon can be done in a sink or dishwasher. The device body and arm should only be wiped down with a disinfecting wipe or damp cloth.

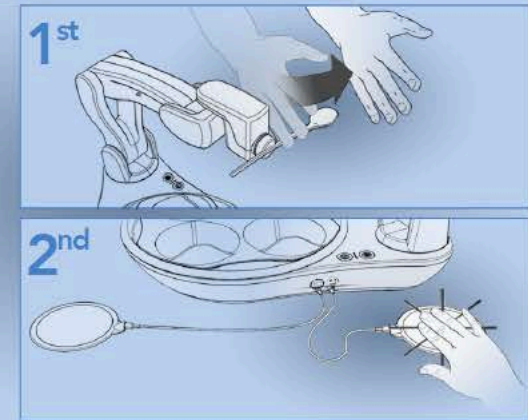


If the power button flashes, please remove the obstructing object. Once removed, touch either switch and the arm will resume its motion.

COLLISION

CHARGING

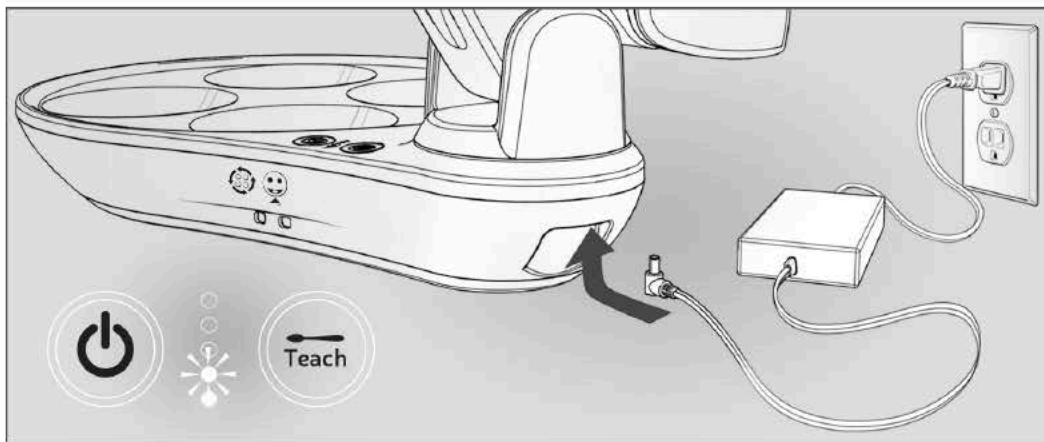

Connect the charge cable to the wall socket and the charger jack to the Obi charge port. All five central lights will be illuminated when the device is fully charged.

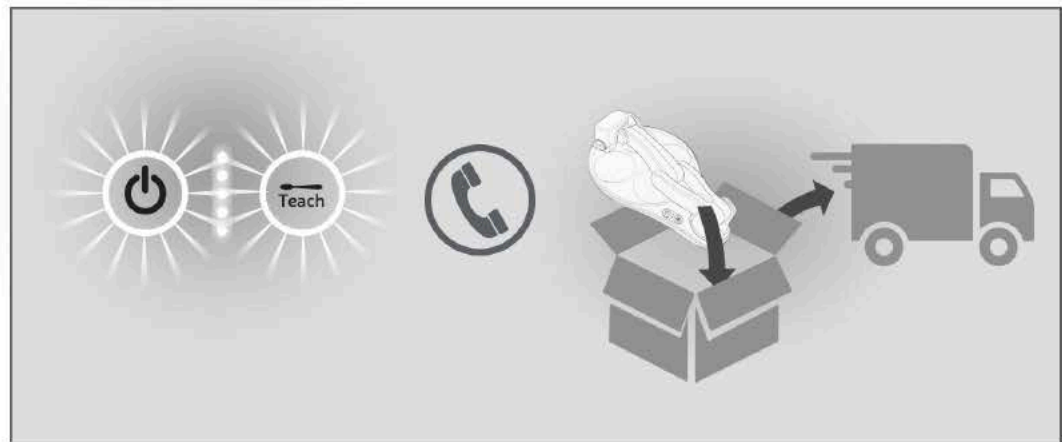

If both indicators are flashing, please power off for ten minutes. Afterwards, turn on Obi and if the problem persists, please call 1-844-HelpObi. If the issue cannot be resolved over the phone, Obi authorized personnel will coordinate servicing your device.

SERVICE REQUIRED